

E-1

Cylinder,Cylinder Head & Spark Plug

Item	Part No.		Q'ty
	1 12200-E03-100	Head, Cylinder	1
	2 12310-E03-101	Ring, Oil	1
	3 12300-E03-100	Ring, Oil	1
	4 12100-E03-001	Cylinder	1
	5 12191-E03-102	Gasket, Cylinder	1
	6 P91000-07109	Bolt, Stud	4
	7 15872-E01-000	Bolt,Leaking	1
	8 15873-E01-000	Cap,Leaking	1
	9 15240-E01-000	Sensor, Temperature	1
	10 92207-E03-000	Nut, cap	4
	11 P93102-E03-000	Washer, Plane (Copper)	4
	12 98069-1BR8HSA-R	Plug, Spark	1

E-2

Piston, Crankshaft

Item	Part No.		Q'ty
	1 13000-E03-000	Crankshaft Ass'y	1
	2 95100-T6204C3	Ball Bearing, Crankshaft	2
	3 96100-204208	Seal,Oil	1
	4 96100-203006	Seal,Oil	1
	5 13200-E03-000	Collar,L Crankcase	1
	6 95200-KBK10	Bearing, Needle	1
	7 13300-E06-000	Piston(std.)	1
	8 13400-E03-100	Pin, Piston	1
	9 13410-E03-100	Clip, Piston Pin	2
	10 13310-E06-000	Rings,Piston(std.)	1
	11 13010-E01-000	Key, Woodruff	1

E-3

Pump Ass'y, Liquid

Item	Part No.		Q'ty
	1 93406-STW08A	CirClip	1
	2 15211-E01-000	Pump Driver Wheel	1
	3 94002-030198	Pin	1
	4 95100-T608LLU	Ball, Bearing	2
	5 15216-E01-000	collar	1
	6 15212-E01-000	Body Pump	1
	7 96100-101804	Seal, Oil	1
	8 15213-E01-001	Rotor Ass'y , Pump	1
	9 96200-525020	Oil-Ring	1
	10 15215-E01-000	Cap,Pump	1
	11 P91740-05016W	Bolt, Pan, Crosshead	3
	12 31130-E01-000	Plug, Rubber	3
	13 15875-E01-000	Bolt, Driver	3
	14 P93100-06013-01W	Washer, Plain	3
	15 P91760-06020-05W	Hex. Socket Bolt	2
	16 1520A-E01-000	Pump Ass'y, Liquid	1

E-4

Radiator

Item	Part No.		Q'ty
	1 15230-A03-010	Radiator Assembly	1
	2 15229-A03-010	Pour Set	1
	3 15233-A01-040	Hose A, Liquid	1
	4 15233-162424	Hose B, Liquid	1
	5 15233-A01-030	Hose C, Liquid	1
	6 17211-E01-000	Cover, Dust-Proof	1
	7 97411-230-12	Clip	8

8	P91740-05010B	Bolt, Crosshead, Pan Phillip:	2
9	71312-A03-000	Support, Radiator	1
10	15236-A03-000	Mesh, Radiator	1
11	91700-06016-10G	Hex. Bolt, Flange	5
12	72116-A01-001	Warning Decal, Radiator	1
13	P91750-06025-10G	Hex. Bolt, Flange	2
14	15235-A01-040	Coolant(green)	1
15	17110-E01-000	Grommet	2
16	91836-A01-001		1
17	71280-A01-000		1
18	P91700-08016-12B		1
19	15234-A01-000		1
20	91700-06012-10G	Hex. Bolt, Flange	2

E-5

Oil Pump

Item	Part No.		Qty	
	1	15100-E01-000	Pump, Oil	1
	2	P91740-05016W	Bolt, Pan, Crosshead	2
	3	94002-030118	Pin	1
	4	93406-STW19A	Circlip	2
	5	15110-E01-000	Drive,Gear, Oil-Pump	1

E-6

Air Cleaner, Reed Valve

Item	Part No.		Qty	
	1	17300-P50-020	Air Cleaner Ass'y	1
	2	16422-E01-000	Band, Intake Manifold	1
	3	16410-P70-010	Manifold, Intake	1
	4	P91760-06020-05W	Hex. Socket Bolt	4
	5	97412-047080	Clip	2
	6	14711-E01-100	Gasket, Reed Valve	1
	7	14711-P70-000	BIG Reed Valve	1

E-7

Carburetor

Item	Part No.		Qty	
	1	16100-P70-020	Carburetor Ass'y	1
	2	16300-E01-010	Filter, Fuel	1
	3	16310-06135	Tube A , Fuel	2
	4	97411-085-06	Clip	4

E-8

Crankcase

Item	Part No.		Q'ty
	1 11340-E03-000	Cover, L. Crankcase	1
	2 11395-E01-101	Gasket, L. Crankcase	1
	3 94001-100140	Pin, Dowel	4
	4 11344-E01-000	Shaft	1
	5 11200-E03-000	Crankcase, L.	1
	6 93507-082021	Bush	1
	7 11210-E01-000	Breather	1
	8 11211-E01-001	Hose,Breather	1
	9 P93101-E01-000	Washer, Copper	1
	10 91700-08012-12G	Hex Waser Face Bolt	1
	11 96200-138024	O-Ring	1
	12 11212-E01-000	Plug, Oil	1
	13 11400-E01-000	Cover, Transmission	1
	14 11410-E01-100	Gasket, Transmission	1
	15 P91760-06020-05W	Hex. Socket Bolt	3
	16 P91760-06035-05W	Hex. Socket Bolt	10
	17 94001-120160	Pin, Dowel	2
	18 11100-E03-000	Crankcase, R.	1
	19 11110-E01-000	Holder	1
	20 P91760-06010-05W	Hex. Socket Bolt	1
	21 31121-E01-100	Gasket, A.C.G	1
	22 P91760-06025-05W	Hex. Socket Bolt	8
	23 P91760-06065-05W	Hex. Socket Bolt	1
	24 93506-123538	Bush	2
	25 17110-E01-000	Grommet	2

E-9

Starter

Item	Part No.		Q'ty
	1 22110-E01-100	Wheel, Starter	1
	2 95200-555912	Bearing, Needle	1
	3 11213-E01-000	Boss	1
	4 P93100-55076-05B	Washer, Plate	1
	5 22100-E03-000	Wheel, Starter	1
	6 22120-E01-000	Idle Gear Ass'y	1
	7 11344-E01-000	Shaft	1
	8 P93100-08216-02C	Washer, Plate	2
	9 22121-E01-000	Plate, Idle Gear	1
	10 P91760-06010-05W	Hex. Socket Bolt	2
	11 28211-E01-100	Kick Shaft Ass'y	1
	12 28261-E01-000	Spring, Torsion	1
	13 28251-E01-000	Bush, Kick Shaft	1
	14 P93100-15228-01C	Washer, Plate	1
	15 93406-STW15A	Circlip	1
	16 16105-A01-000	Kick Ass'y	1
	17 P91770-06025-10C	Hex. Bolt	1
	18 28221-E01-100	Kick Pinion Ass'y	1

E-10
Clutch

Item	Part No.		Q'ty
	1 22300-E01-010	Secondary Sheave Ass'y	1
	2 22312-E01-000	Spring, Compression	1
	3 22331-E01-000	Spring, Clutch	3
	4 22330-P70-000	Carrier Ass'y, Clutch	1
	5 22332-E01-200	Nut, Clutch	1
	6 22340-E01-000	House. Clutch	1
	7 P92111-E01-010	Hex. Acorn Nut	1
	8 96200-125030	O-Ring	1
	9 22411-E03-100	Plate, Cam	1
	10 22412-E01-000	Slider, Cam Plate	3
	11 22413-P70-010	Weight Roller	6
	12 22410-P70-200	Sliding Sheave, Primary	1
	13 22414-E03-100	Collar	1
	14 22420-E03-100	Fixed Sheave, Primary	1
	15 22421-E03-100	Waser, Clam	1
	16 22422-E03-000	Clutch, Oneway	1
	17 P93103-E01-000	Washer, Conical Spring	1
	18 P92110-10-17C	Hex. Acorn Nut	1
	19 22500-E03-000	Belt, Drive	1
	20 22400-E03-000	Sliding Sheave , Ass'y	1

E-11
Transmission

Item	Part No.		Q'ty
	1 95100-638RD	Bearing, Ball	1
	2 96100-172855	Seal, Oil	1
	3 93406-STW17A	Circlip	1
	4 95100-T6003	Bearing,Ball	1
	5 23610-E01-100	Drive Gear, Primary	1
	6 P91760-06010-05W	Hex. Socket Bolt	1
	7 P93100-06519-12W	Waser, Plate	1
	8 P93104-E01-000	Washer, Conical Spring	1
	9 23620-E01-100	Main Axle Comp	1
	10 95100-T6201	Bearing,Ball	1
	11 23630-E01-100	Gear, Driven	1
	12 95200-HMK2515-1	Bearing,Needle	1
	13 93405-IRTW32A	Circlip	1
	14 96100-253506	Seal, Oil	1
	15 95100-6004LLU	Bearing, Ball	1
	16 93405-RTW42A	Circlip	1
	17 23801-E01-000	Sprocket, Drive	1
	18 92130-14S-19G	Nut, Insert Lock	1

E-12
Generator

Item	Part No.		Q'ty
	1 31120-E03-000	Base Ass'y, Generator	1
	2 P91760-06016-05W	Hex. Socket Bolt	2
	3 31100-E03-000	Wheel, Fly	1
	4 P93100-10022-20C	Washer, Plate	1
	5 P92110-10-17C	Hex. Acorn Nut	1
	6 31000-E03-000	Generator Ass'y	1

E-13
Start Motor

Item	Part No.		Q'ty
	1 31200-E01-000	Starting Motor Ass'y	1
	2 P91760-06020-05W	Hex. Socket Bolt	2

E-14
Crankcase Bracket

Item	Part No.		Q'ty
	1 11347-E01-000	Bracket, Crankcase	1
	2 11348-E01-000	Shaft, Fix	1
	3 92130-08S-14G	Nut, Insert Lock	1
	4 96200-075015	O-Ring	1
	5 P92100-12040-14C	Hex. Bolt, Flange	1
	6 P92120-12-14C	Hex. Acorn Nut, Flange	1

F-1
Exhaust Pipe

Item	Part No.		Qty
	1 12160-P70-010	Exhaust Pipe	1
	2 12161-A01-000	Washer, Muffler	1
	3 91811-A01-000	Bolt, Crosshead, Flange	2
	4 91700-10040-14G	Hex. Bolt, Flange	1
	5 92130-10S-14G	Nut, Insert Lock	1
	6 97412-P70-000	Clip, Exhaust Muffler	1
	7 91700-08016-12G	Hex. Bolt, Flange	1
	8 91700-08012-12G	Hex. Bolt, Flange	2
	9 92130-08S-14G	Nut, Insert Lock	1

F-2
Frame

Item	Part No.		Qty
	1 71000-A01-072	Chassis	1
	2 93405-IRTW32A	Circlip	1
	3 95100-B6002 2RS	Bearing	1
	4 93501-A01-000	Couhion, Seat	2
	5 71205-A01-000	Engine Holder Seat	2
	6 93305-A01-100	Collar (andoised)	1
	7 93310-A01-100	Collar(andoised)	1
	8 91700-12220-14G	Blot Flange	1
	9 91710-08035-12G	Hex Washer Face Bolt	2
	10 91700-08012-12G	Hex Waser Face Bolt	4
	11 92130-12S-17G	Nut, Insert Lock	1
	12 91760-06012-05G	Hex. Screw, Socket	2
	13 15105-A01-001	Aux Liquid Bottle	1
	14 71310-A01-000	Aux Liquid Bottle Holder	1
	15 15106-A01-000	Aux Liquid Bottle Connector	1
	16 15108-A01-000	Aux Liquid Bottle Hose (sho)	1
	17 15107-A01-000	Aux Liquid Bottle Hose(long)	1
	18 71236-A01-000	VIN Plate	1
	19 91835-A01-000	Stud, Warning Plate	2

F-3

A Arm, Footrest

Item	Part No.		Qty
	1 82105-A01-001	Fork, Rear	1
	2 95305-A01-000	Bushing Contain Oil	2
	3 93315-A01-000	Spacer Tube, Rear-fork	1
	4 93609-A01-100	Seal cover,swing Arm	2
	5 93500-A01-000	Rubber Sleeve	1
	6 P91700-14290-19G	Bolt, Flange	1
	7 92130-14S-19G	Nut, Insert Lock	1
	8 91700-08012-12G	Hex Waser Face Bolt	8
	9 71215-A01-000	Footrest Assy	2
	10 93502-A01-000	Rubber Mate	8

F-4

Fend Bur, Rocker Arm

Item	Part No.		Qty
	1 81105-A02-032	A. Arm, Upper,Left	1
	2 81106-A02-001	A. Arm, Lower, Left	1
	3 81110-A02-022	A Arm, Upper,Right	1
	4 81111-A02-001	A Arm, Lower,Right	1
	5 93505-A01-100	Bush	4
	6 93507-082021	Bush	4
	7 52316-A03-000	Ball Joint	2
	8 93406-STW34	Cir Clip	2
	9 91710-08035-12G	Hex Washer Face Bolt	4
	10 91700-10048-14G	Hex Washer Face Bolt	4
	11 92130-10S-14G	Nut, Insert Lock	8
	12 P93100-10517-26G	Washer,Plate	4
	13 P92140-10-14G	Cross Thread Nut	4
	14 94000-02019	Cotter pin	4
	15 71211-A01-050	Front Bumper	1
	16 91700-08012-12G	Hex Waser Face Bolt	2
	17 91750-06016-10G	Bolt ,Flange	2

F-5

Fuel Tank, Oil Tank

Item	Part No.		Qty
	1 12110-A01-100	Sponage	2
	2 12220-A01-001	Bracket, Support	1
	3 12210-A01-000	Gauge, Oil Level	1
	4 97411-A01-000	Clip	2
	5 12150-A01-020	Cap Assembly, Fuel tank	1
	6 12100-A01-020	Tank, Fuel	1
	7 12205-A01-101	Cap, Oil Tank	1
	8 12200-A01-101	Tank, Oil	1
	9 91750-06016-10G	Bolt ,Flange	2
	10 97410-E01-000	Clip, Tube	4
	11 12310-A01-002	Tube, Fuel A	1
	12 12311-A01-002	Tube, Fuel B	1
	13 12317-A01-011	Tube,Oil	1
	14 12105-A01-000	Valve, Fuel	1
	15 12215-A01-000	Oil Filter	1
	16 91700-06012-10G	Hex. Bolt, Flange	1
	17 91821-A01-000	Bolt, Hex Ladder(Short)	2
	18 12153-A01-100	Spring	1
	19 12151-A01-001	Hose, Breather (300mm)	1

F-6

Shock Absorber, Lamp

Item	Part No.		Qty
	1 81200-A01-040	Shock Absorber, Front	2
	2 82200-A01-040	Shock Absorber, Rear	1
	3 91710-10038-14G	Hex. Bolt, Flange	2
	4 91700-10040-14G	Hex. Bolt, Flange	2
	5 91700-10040-14G	Hex. Bolt, Flange	2
	6 92130-10S-14G	Nut, Insert Lock	4
	7 62205-A01-010	Head Lamp Comp	1
	8 62206-A01-000	Head Lamp Bracket	1
	9 P91825-04012	Philips Screw, Tapping	4
	10 62210-A01-000	Tail Light Comp	1
	11 92130-06S-10G	Nut, Self-Locking	2

F-7

Front Tire

Item	Part No.		Qty
	1 24110-A01-050	Tire 19*6-10	2
	2 24205-A03-000	Rim 10*5.5	2
	3 24106-A01-000	Valve, Tire	2
	4 24190-A03-000	Tire Nut	8
	5 23100-A03-000	Fixed Bracket, Wheel Hub,F	2
	6 23100-A03-000-1	Wheel Hub, Front Rim	2
	7 95100-6202LU	Bearing, Ball	2
	8 95100-6004LLU	Bearing, Ball	2
	9 96100-284508	Seal, Oil	2
	10 96100-203507	Seal, Oil	2
	11 93325-A03-000	Spacer, Inner	2
	12 93300-1520-10	Spacer, Outer	2
	13 93300-2128-07	Spacer, Outer	2
	14 93100-14540-45G	Washer, Plate	2
	15 P92140-14-21G	Cross Thread Nut	2
	16 94000-03032	Cotter pin	2
	17 93615-A01-000	Cap, Rubber	2

F-8

Rear Tire

Item	Part No.		Qty
	1 24105-A01-050	Tire (KENDA K530F) 18*7-7	2
	2 24210-A01-000	Rim 7*5.2	2
	3 23105-A01-010	Fixed bracket , Rim , Rear	2
	4 24106-A01-000	Valve, Tire	2
	5 93615-A01-000	Cap, Rubber	2
	6 92140-14-19G	Nut, Insert Lock	2
	7 93100-14540-45G	Washer, Plate	2
	8 94000-03032	Cotter pin	2
	9 92130-10S-14G	Nut, Insert Lock	8

F-9

Drum Brake,Front

Item	Part No.		Qty
	1 31460-A01-100	Lever Ass'y,Right	1
	2 31230-A02-001	Hose, Front Discbrake	1
	3 91830-A01-000	Bolt, Brake Hose	3
	4 93101-A01-000	Washer, Copper	6
	5 91700-06016-10G	Hex Washer Face Bolt	1
	6 31305-A03-000	Brake Disc,Front L.	1
	7 31310-A03-000	Brack Disc,Front R.	1
	8 91831-A03-000	Bolt, Brake Disc	6
	9 31336-A03-100	Caliper Ass'y,Front Left	1
	10 31335-A03-100	Caliper Ass'y,Front Right	1
	11 P91710-08018-12G	Hex Washer Face Bolt	4
	12 31337-A03-001	Brake Pad , Disk Brake	2

F-10

Disc Brake System

Item	Part No.		Qty
	1 31115-A01-100	Rear Disc Caliper	1
	2 31225-A01-001	Hose, Rear Disk Brake	1
	3 31300-A01-021		1
	4 31335-A01-112	Rear Holder Disk	1
	5 95100-T6006ZZ	Bearing	2
	6 93330-A01-00A	Spacer	1
	7 96100-355511A	Oil Seal	1
	8 96100-405507	Oil Seal	1
	9 31355-A01-020	Rear Disc Connector	1
	10 31120-A01-000	Rear Brake Disc	1
	11 91760-10014-08G	Hex Socket Bolt	3
	12 91710-08038-12G	Hex Washer Face Bolt	2
	13 91710-12028-17G	Hex Washer Face Bolt	4
	14 91830-A01-000	Nut, Brake Hose	2
	15 93101-A01-000	Washer, Copper	4
	16 83115-A01-000	Clip, Brake Hose	1
	17 91700-06016-10G	Hex Washer Face Bolt	1
	18 92130-06S-10G	Nut, Self-Locking	1
	19 71220-A01-000	Rear Brake Guard	1
	20 91700-08012-12G	Hex Waser Face Bolt	2
	21 31337-A03-001	Brake Pad , Disk Brake	1
	22 31405-A01-100	Lever Ass'y,Left	1

Handle bar,Lever

Item	Part No.		Qty
	1 51100-A01-010	Handlebar	1
	2 31410-A02-000	Bottom Clamp,Throttle	1
	3 51105-A01-000	Grip, Handle(L)	2
	4 61100-A01-010	Handle Switch Ass'y, Left	1
	5 52105-A01-000	Bottom Clamp, Handlebar	2
	6 52110-A01-000	Top Clamp, L. Handlebar	1
	7 52115-A01-000	Top Clamp, R. Handlebar	1
	8 92130-10S-14G	Nut, Insert Lock	2
	9 P91760-06025-05G	Screw, Hex. Socket	4
	10 51110-A01-050	Pad, Handlebar	1
	11 52125-A01-00A	Clamp, Indicator Light(1 hole	1
	12 91760-06012-05G	Hex. Screw, Socket	2
	13 62105-A01-00A	Indicator Light, Oil(Red)	1
	14 31215-A01-020	Cable, Throttle	1
	15 62126-A01-000	Indicator Light, Temperature	1

F-12

Rear Axle,Sprocket

Item	Part No.		Qty
	1 23205-A01-050	Wheel Axle,Rear	1
	2 92110-28-36B	Hex. Acorn Nut	2
	3 P90430-303801	WASHER,WAVE	1
	4 23305-A01-00E	Sprocket	1
	5 23310-A01-000	Sprocket Holder, Driven	1
	6 91810-A01-000	Bolt, Hex. Washer Plate	3
	7 93103-A01-000	Spring Washer	3
	8 23300-A01-00E	Sprocket Ass'y(rear428-32T	1

F-13

Chain,Guard

Item	Part No.		Qty
	1 23315-NP428H-084	Chain	1
	2 71225-A01-000	Guard, Bottom, Chain	1
	3 23321-A01-010	Adjuster, Chain(M8)	2
	4 91700-08012-12G	Hex Waser Face Bolt	5
	5 92130-08S-14G	Nut, Insert Lock	4
	6 71230-A01-100	Guard, Top, Chain	1
	7 23320-A01-002	Bracket, Chain	1
	8 91823-A01-000	Hex Washer Ladder Bolt	1

F-14

Steering,Shaft ,Link

Item	Part No.		Qty
	1 52205-A01-020	Steering Shaft Ass'y	1
	2 52320-A03-000	Knuckle, L.	1
	3 52325-A03-000	Knuckle, R.	1
	4 P93107-21228-10	Washer, Plain	2
	5 52120-A01-000	Shaft Holder, Steering	2
	6 93510-A01-000	Bush, PU	1
	7 96100-183207A	Seal , Oil	1
	8 93325-A01-100	Spacer, Inner	1
	9 96100-223507A	Seal, Oil	1
	10 92130-08S-14G	Nut, Insert Lock	2
	11 92130-14S-19G	Nut, Insert Lock	1
	12 92130-10S-14G	Nut, Insert Lock	2
	13 94000-01620	Cotter pin	4
	14 94000-03032	Cotter pin	1
	15 52300-A02-020	Link Ass'y	2
	16 92141-10-14G	Cross Thread Nut	2

F-15
Electronics

Item	Part No.		Qty
	1 63100-A01-070	Main Wire Assy	1
	2 63205-A01-00A	Battery	1
	3 61105-A01-001	Main Switch	1
	4 61107-A01-000	Clip, Main Switch	1
	5 61136-A01-010	Switch,Engine Stop	1
	6 83110-A01-000	Rubber Band,Tool Bag	1
	7 61115-A01-030	C.D.I Unit	1
	8 61120-A01-000	Rectifier & Regulator	1
	9 61125-A01-100	Resistor	1
	10 61130-A01-100	Starter Relay	1
	11 61109-A01-000	Ignition Coil Comp	1
	12 72105-A01-000	Tool Bag	1
	13 93705-A01-000	Strap	12
	14 91740-05012G	Bolt, Pan Phillips	2
	15 91700-06016-10G	Hex Washer Face Bolt	3
	16 91700-06012-10G	Hex. Bolt, Flange	1
	17 83105-A01-010	Rubber Band, Battery	1
	18 72117-A01-0LD	Owner manual	1
	19 97810-A01-000		0

F-16
Seat, Fender

Item	Part No.		Qty
	1 71305-A01-0LD	Seat	1
	2 72205-A01-000	Fender, Front(Blue)	1
	72205-A01-00A	Fender, Front(Red)	
	72205-A01-00D	Fender, Front(Black)	
	72205-A01-00G	Fender, Front(Orange)	
	72205-A01-00E	Fender, Front(White)	
	72205-A01-0PK	Fender, Front (Pink)	
	3 72210-A01-000	Fender, Rear (Blue)	1
	72210-A01-00A	Fender, Rear (Red)	
	72210-A01-00D	Fender, Rear (Black)	
	72210-A01-00G	Fender, Rear (Orange)	
	72210-A01-00E	Fender , Rear(White)	
	72210-A01-0PK	Fender, Rear(Pink)	
	4 72215-A01-000	R. Footrest	1
	5 72220-A01-000	L. Footrest	1
	6 91750-06016-10G	Bolt ,Flange	2
	7 93104-A01-010	Washer, Nylon	16
	8 72110-A01-060	warning sticker, no under 6	1
	9 72110-A01-050	warning sticker, engine proo	1
	10 72110-A01-030	Warning Sticker	1
	11 72110-A01-040	Warning Sticker, Tire Pressu	1
	12 91700-06016-10G	Hex Washer Face Bolt	8
	13 91825-A01-00A	Screw, Tapping	16
	14 92215-A01-000	U Plate Nut	16
	15 92210-A01-000	U Plate Nut(Andoised)	2
	16 P91731-06015S	Screw,Cross	2
	17 91821-A01-000	Bolt, Hex Ladder(Short)	2
	18 91820-A01-000	Bolt, Hex Ladder(Long)	2
	19 92130-06S-10G	Nut, Self-Locking	8
	20 72120-A01-000	Heat Cushion(Side)	1
	21 72125-A01-000	Heat Cushion(Front)	1
	22 72130-A01-000	Heat Cushion(Rear)	1
	23 72115-A01-0LD	Sticker	1